# User Manual

# Foxit eSlick FE-01

©2009 Foxit Corporation. All rights reserved.

DECLARATION OF CONFORMITY

We, FOXIT SOFTWARE declare under our sole responsibility that the product E-BOOK Reader complies with Part 15 of the FCC Rules.

We, FOXIT SOFTWARE declare under our sole responsibility that the product E-BOOK Reader complies with the requirement set out by the Council Directive 2004/108/EC (Electromagnetic Compatibility Directive).

Copyright © 2009 Foxit Software Company, LLC. All Rights Reserved.

No part of this document can be reproduced, transferred, distributed or stored in any format without the prior written permission of Foxit.

DISCLAIMER AND LIMITATION OF LIABILITY

Foxit Software Company, LLC. and its suppliers assume no responsibility for any damage or loss resulting from the use of this guide. Foxit Software Company, LLC. and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this device. Foxit Software Company, LLC. and its suppliers assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs. Be sure to make backup copies of all important data on other media to protect against data loss.

# Contents


**ESlick End User License Agreement ..... 5**
**Introduction ..... 8**
Welcome ..... 8
What's in the box? ..... 8
About the Manual ..... 9
Finding More Information ..... 9
**Getting Started ..... 10**
Foxit eSlick overview: ..... 10
Setting up eSlick: ..... 12
Setting up the AC adapter ..... 12
Charging the battery: ..... 13
Using the SD card: ..... 14
Turning eSlick on or off: ..... 15
Transferring content from your computer: ..... 15
About the menu: ..... 16
**Reading Content ..... 18**
File formats supported: ..... 18
Working with PDF eBooks: ..... 18
About the option menu: ..... 19
Opening and closing PDF's: ..... 19
Scrolling through documents: ..... 20
Using bookmark menu: ..... 22
Adjusting the view of documents: ..... 23
Viewing documents in landscape mode: ..... 24
Viewing documents in reflow mode: ..... 25
Working with text files: ..... 26
Opening and closing text files: ..... 27
Scrolling through documents: ..... 27
**Playing MP3 ..... 29**
Playing MP3 files: ..... 29
Reading books while playing MP3 files: ..... 31
**Settings ..... 32**
Setting the sleep mode: ..... 32
Setting the eSlick volume: ..... 33
Checking eSlick's system memory: ..... 34
Setting eSlick's music mode: ..... 35
Setting eSlick's preference: ..... 36
Viewing eSlick's information: ..... 37
**Other Information ..... 38**
eSlick firmware update ..... 38

Getting license key for the included software ..... 38
FCC notice ..... 38
CE notice ..... 39
On Safety ..... 39
On Cleaning ..... 40
Specification ..... 41
**Contact US ..... 42**

# ESlick End User License Agreement

### *FOR FOXIT eSlick HARDWARE PRODUCT*

FOXIT SOFTWARE COMPANY ("FOXIT") LICENSES THIS E-BOOK READER FOXIT ESLICK HARDWARE PRODUCT TO YOU SUBJECT TO THE TERMS CONTAINED IN THIS END USER LICENSE AGREEMENT ("EULA"). READ THE TERMS OF THIS EULA CAREFULLY. BY INSTALLING, COPYING OR OTHERWISE USING THE SOFTWARE ON THE DEVICE (AS DEFINED BELOW), YOU AGREE TO BE BOUND BY THE TERMS OF THIS EULA. IF YOU DO NOT AGREE TO THE TERMS OF THIS EULA, DO NOT INSTALL, COPY OR USE THE SOFTWARE/HARDWARE.

### *NOTICE TO CUSTOMER*

*If you do not agree to the terms of this EULA, do not install, or use this hardware. This EULA is a contract between you (either an individual or an entity) and Foxit which governs your use of this Foxit hardware product that accompanies this EULA and related software components, which may include the associated executable programs, explanatory materials and the supporting documentation.*

This EULA is a legal agreement between you and Foxit Software Company. This EULA governs your rights and obligations regarding:

a.) All software of Foxit or other software companies that you download from websites of Foxit for installation on a personal computer and any updates/upgrades provided by Foxit unless you agree to other terms as part of such update/upgrade process.
b.) media on which any such software is distributed
c.) any printed, on-line or other electronic documentation for such software
d.) any data files created by operation of such software

All of the above are collectively referred to in this EULA as the SOFTWARE.

### *LICENCE GRANT*

Foxit grants your company a license to use one copy of the Software on Foxit eSlick. Each License purchased allows you to install 1 copy of the license. "Use" means storing, loading, installing and executing. You agree to use all reasonable efforts to protect the Product from unauthorized use, reproduction, distribution or publication. You may not modify the Software or disable any licensing or control features of the Software in any manner without prior written permission by Foxit.

### *LICENSE LIMITATIONS*

You may not copy the Software of the eSlick except for a reasonable number of machine-readable copies of the software for backup or archival purposes and except as expressly permitted in the License Grant section above. You may not remove any titles, trademarks or trade names, copyright notices, legends, or other proprietary markings on the Software. You are not granted any rights to any trademarks or service marks of Foxit. Foxit retains all rights not expressly granted to you.

### *PROPRIETARY RIGHTS RESERVED BY FOXIT*

Foxit retains all right, title, and interest in and to the Software and the Software License Key and in all related copyrights, trade secrets, patents, trademarks, and any other intellectual and industrial property and proprietary rights, including registrations, applications, renewals, and extensions of such rights.

### *RESTRICTIONS*

You may not (i) sell, lease, license, sublicense, distribute or otherwise transfer in whole or in part the Software, the Software License Key or to another party; (ii) provide, disclose, divulge or make available to, or permit use of the Software in whole or in part by, any third party without Foxit's prior written consent; (iii) decompile, disassemble, reverse engineer, or otherwise attempt to derive source code from the Software, in whole or in part; (iv) modify or create derivative works based upon the Software; or (v) use the Software on a service bureau or hosting basis to provide Remote Access Services connecting your customers to an operating system.

### *TERMINATION*

Foxit may terminate this EULA if you fail to comply with any term of this EULA. In the event of termination, you must destroy all copies of the Software and Software License Key. In addition you must remove all copies of the Software from the Server and all computers and terminals on which it is installed.

### *GOVERNING LAW AND GENERAL PROVISIONS*

This EULA will be governed by the laws of the State of California, U.S.A., excluding the application of its conflicts of law rules. This EULA will not be governed by the United Nations Convention on Contracts for the International Sale of Goods, the application of which is expressly excluded. If any part of this EULA is found void and unenforceable, it will not affect the validity of the balance of the EULA, which shall remain valid and enforceable according to its terms. You agree that the Software will not be shipped, transferred or exported into any country or used in any manner prohibited by the United States Export Administration Act or any other export laws, restrictions or regulations. This EULA shall automatically terminate upon failure by you to comply with its terms. This

Agreement may only be modified in writing signed by an authorized officer of Foxit Software Company.

### *LIMITATION OF LIABILITY*

IN NO EVENT WILL FOXIT BE LIABLE FOR ANY LOST PROFITS OR BUSINESS OPPORTUNITIES, LOSS OF USE, BUSINESS INTERRUPTION, LOSS OF DATA, OR ANY OTHER INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES UNDER ANY THEORY OF LIABILITY, WHETHER BASED IN CONTRACT, TORT, NEGLIGENCE, PRODUCT LIABILITY, OR OTHERWISE. THIS LIMITATION SHALL APPLY REGARDLESS OF WHETHER FOXIT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. FOXIT'S LIABILITY UNDER THIS EULA WILL NOT, IN ANY EVENT, EXCEED THE LICENSE FEES, IF ANY, PAID BY YOU TO FOXIT FOR THE SOFTWARE LICENSED BY YOU UNDER THIS EULA.FOXIT'S LIABILITY IS LIMITED TO REPLACEMENT OR REFUND OF ONLY THE VIRUS-INFECTED SOFTWARE DOWNLOADED FROM FOXIT WEBSITE.

### *CONTACT INFORMATION*

If you have any questions about this EULA, or if you want to contact Foxit for any reason, please direct E-mail to: sales@foxitsoftware.com.

# Introduction

## Welcome

Congratulations on your purchase of the Foxit eSlick – the most innovative eBook Reader on the planet. This Digital eReader device by Foxit is a portable reading device for eBooks. Its high-resolution electronic paper display delivers a realistic print look that rivals traditional paper while using minimal power.

As Foxit's first generation offering, the eSlick is specifically designed to support multiple formats and enables users to view various documents with ease. With the award-winning Foxit Reader integrated into the compact and lightweight device, the Foxit eSlick provides its users with an outstanding reading experience. For more information about the eSlick, please go to http://www.foxitsoftware.com/ebook/.

## What's in the box?

You should have received the following items in the Foxit eSlick box:

**Hardware**

- eSlick Reading Device
- USB Cable
- AC Adapter
- SD Card (2GB)
- Earphones
- Earphones Adapter

**Document and Software**

- Limited Warranty
- Quick Start Guide
- CD – includes Foxit Reader Pro Pack, PDF Creator, PDF Editor (Trial) and PDF Page Organizer Pro (Trial)

***Note:*** *The software that comes with eSlick will only work on Windows, but files can still be transferred to the eSlick device using other operating systems.*

# About the Manual

This complete step-by-step guide provides useful guidelines for users on how to operate the device. This PDF format "User Manual" can be either browsed on your computer or the eSlick.

***Tip:*** *To view this manual, you can install the small and fast Foxit Reader from the CD included in the box.*

# Finding More Information

Foxit provides complete support and services for users who purchase eSlick. To find more information about the eSlick device, please go to http://www.foxitsoftware.com/ebook.

# Getting Started

This section is a quick start guide to help you get acquainted with various buttons, ports, and other parts of your eSlick device.

## Foxit eSlick overview:

### Front view

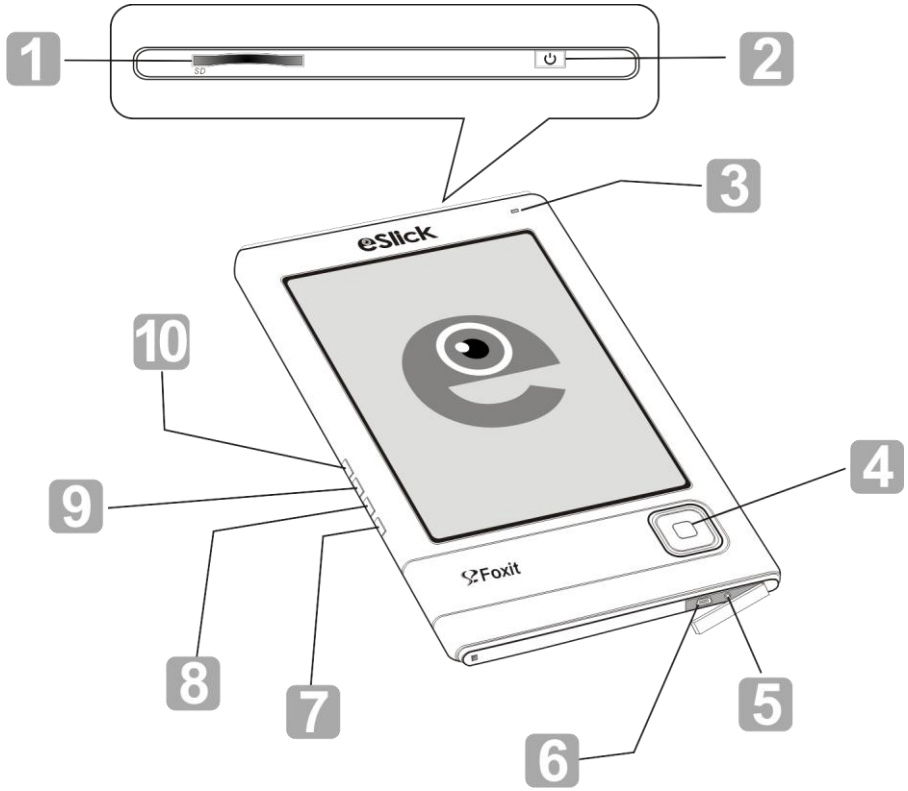


1 SD slot – To insert your SD Card.

2 Power button –To turn eSlick's power on or off.

3 Indicator – Lights up in red while charging, and flashes green when the device is being operated.

4 Navigator and Center button – To select an item, scroll around the screen, or

act as shortcut keys.

5 Headset jack – To connect the earphones.

6 USB connector – To connect the USB cable.

7 Delete button – To delete the file you selected.

8 Return button – To return to the previous screen or close the book you are reading.

9 Menu button – To show the main menu.

10 Music button – To go to the music menu.

**Back view**

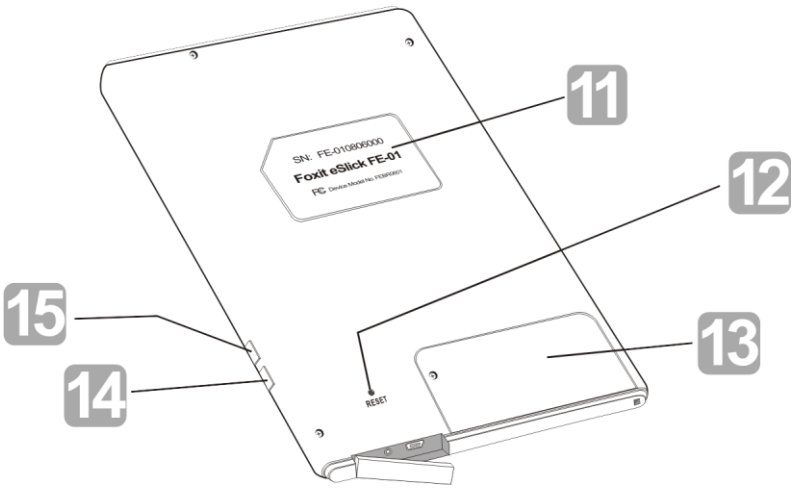


11 Label – To show the relevant info and SN number for eSlick device.

12 Reset button – To clear any pending errors and reset the eSlick device.

13 Battery cover – To cover the battery.

14 15 -/+ Volume buttons – To adjust the volume or page magnification.

## Setting up eSlick:

Read the guide below to prepare your eSlick for use. Once you have purchased and received your eSlick device, please charge the battery and insert the SD Memory Card into the device. When these preparations are done, you can begin to transfer files as well as other content onto the eSlick device.

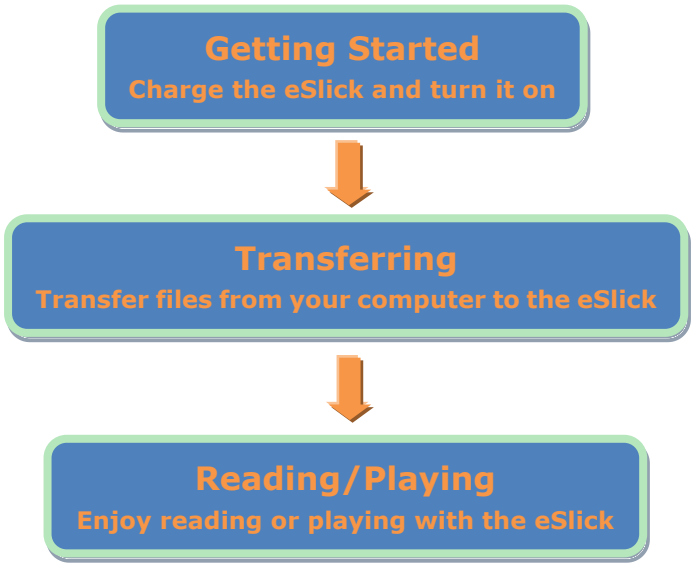
Getting Started
Charge the eSlick and turn it on
Transferring
Transfer files from your computer to the eSlick
Reading/Playing
Enjoy reading or playing with the eSlick

## Setting up the AC adapter

**1.** To assemble the AC adapter, please put the provided interchangeable plug into the plug recess and then turn it in a clockwise direction. Hearing a click means the plug has locked into place.

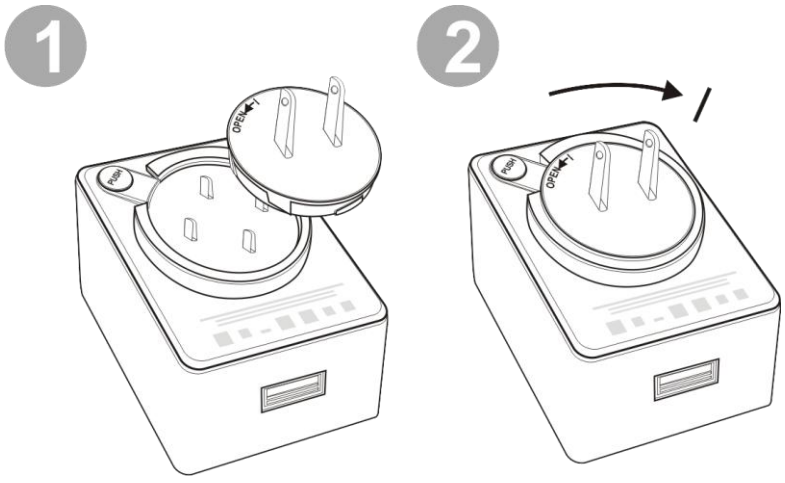

**2.** To dissemble the AC adapter, please press the **PUSH** button, turn it in a counterclockwise direction and then take it out.

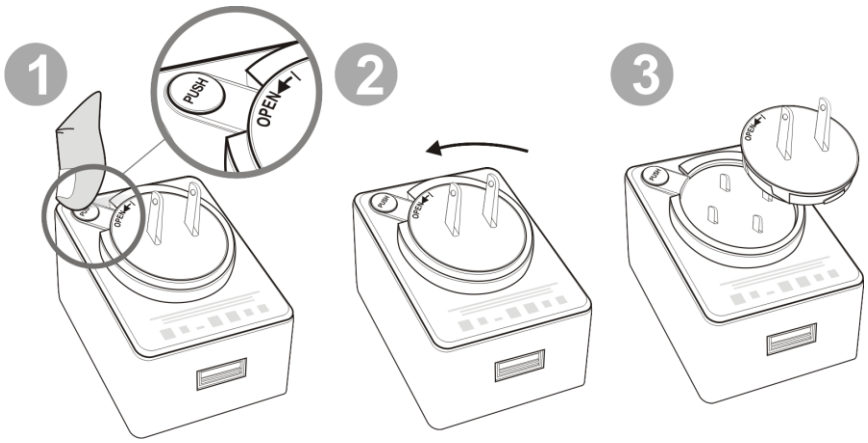


## Charging the battery:

Foxit eSlick is powered by a rechargeable battery. The full performance of a new battery is achieved only after two or three complete charge and discharge cycles. We recommend charging your eSlick for 3-4 hours or until the LED indicator turns off. Charging the eSlick is required before using it for the first time. To charge the battery, please do one of the following:

➲ Connect the eSlick itself to a computer via the USB cable.

➲ Plug the USB cable into the AC adapter and then plug the small end of the cable into the eSlick device. Connect the AC adapter to the circuit to start

charging.

While the eSlick is charging, the LED indicator located at the top of the device emits a red light. Once the battery is fully charged, the LED indicator will go off indicating that the eSlick has been fully charged. To verify the remaining battery power, please check the battery icon at the top right corner of the screen.

***Notes:***

- *When the battery charge level is too low for operation, the eSlick device will switch itself off.*
- *You cannot operate eSlick while charging the device with a computer. The eSlick device will go into a "sync" mode and will be waiting for files to be transferred via the computer.*

## Using the SD card:

The SD card slot on top of the eSlick enables you to insert an SD card to extend the storage capacity of your eSlick device.

To insert or remove the SD card, follow these steps:

**1.** Hold the eSlick with the screen facing you, and hold the SD card with the label on the SD card facing you.

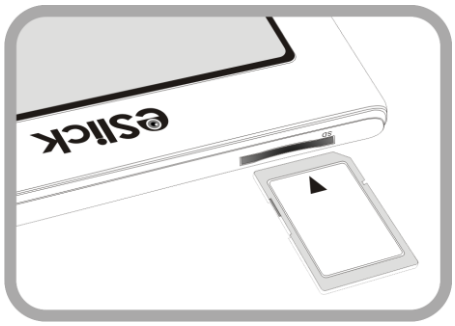


**2.** Insert the SD card into the SD card slot. Hearing a click means the card has locked into place.

**3.** To remove the card from the slot, press down and release the SD card. You will hear a click when the SD card pops out.

***Notes:***

- *Foxit eSlick supports Standard SD Cards (whose capacities range from 4 MB to 4 GB) and does not comply with other flash memory cards.*
- *Be sure to insert the SD card in the correct direction. Forced insertion may damage the slot.*
- *Do not insert an incompatible memory card or a deformed memory card.*
- *Do not remove the memory card or turn off eSlick while reading data, as data may be damaged.*

## Turning eSlick on or off:

- To turn your eSlick on, press and hold the power button for 1 second or until the screen starts flashing.

- To turn your eSlick off, press and hold the power button for 1 second or until the screen shows “goodbye”.

## Transferring content from your computer:

Foxit eSlick is an UMS (USB Mass Storage) device. You can transfer all kinds of files from your computer onto the eSlick. Please turn the eSlick on before you begin transferring files.

1. Connect your eSlick to the computer via the provided USB cable.

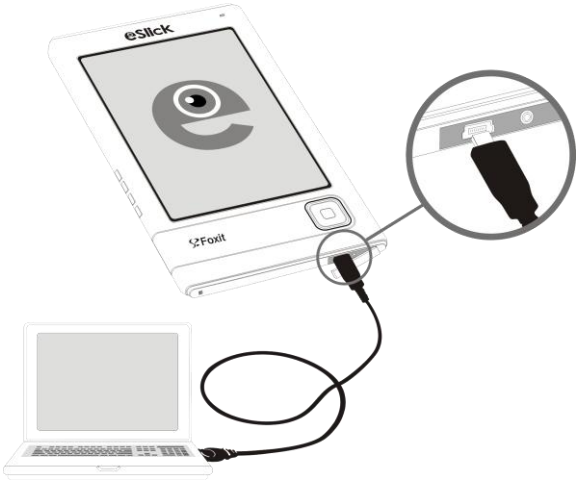


2. (Optional) If the SD card has been inserted into eSlick, two Removable Disks (one is for eSlick device, while the other one is for SD card) will be shown on your computer.

3. Copy, add, move, or delete files directly from your computer.

***Notes:***

- *While your device is connected to your computer, its battery is charging and eSlick is not operable.*
- *To transfer files to an SD card, you can also put your SD card into a device or computer that has an SD card slot.*

# About the menu:

After turning on your eSlick device, please wait a few moments and you will see the "**Main menu**" (see below). To select a menu item, press the **Navigation** button left, right, up or down, and then press the center of the **Navigation** button to select your item.

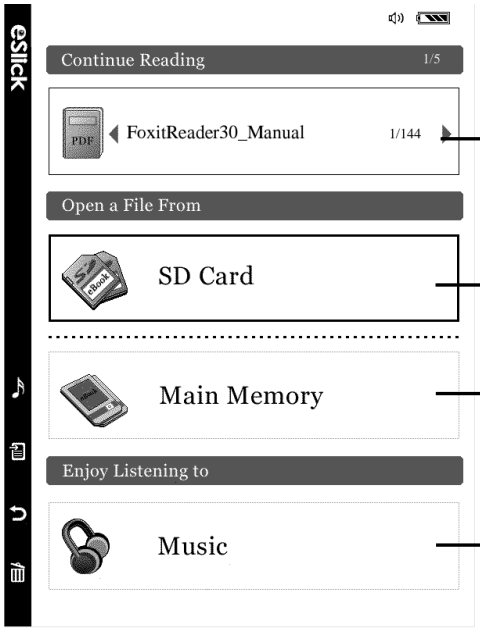


Indicates the last 5 displayed books

Lists the eBooks stored on the SD card

Lists the eBooks stored on the eSlick device

Lists the MP3 audio files

To select a menu item, press the **Navigation** button up or down, and then press the Center button.

# Reading Content

Before reading content, please transfer the files from your computer onto the eSlick. Foxit eSlick device keeps a record of your reading progress automatically. To learn more about transferring files onto your eSlick, please go to "Transferring content from your computer."

***Note:*** *The* ***Music*** *button is disabled when reading files, preventing you from going to the Music menu by accident.*

## File formats supported:

The following are the book types that are supported by Foxit's eSlick device:
**PDF file** – a file in PDF format.
**TXT file** - a kind of computer file that is structured as a sequence of lines.
**Any printable document** – after a document is converted to a PDF using software that is included with the eSlick. For more information on this, please refer to Foxit PDF Creator.

***Notes:***

- *To ensure the best reading experience, you will need to set the PDF page size to 117X90mm when converting documents to PDFs with the included software – Foxit PDF Creator.*
- *To change the PDF page size, please go to the Properties dialog box for Foxit PDF Printer, choose the* ***Layout*** *tab, select* ***Custom-size Form****, input the desired page size, and then click* ***OK****.*

## Working with PDF eBooks:

This section explains how to work with eBooks on your eSlick device, including opening or closing books, scrolling through documents, adjusting the view of files, and the use of bookmarks, etc.

**About the option menu:**

The option menu provides general commands for PDF eBook reading, such as adjusting the view of the page, opening the outline, etc.

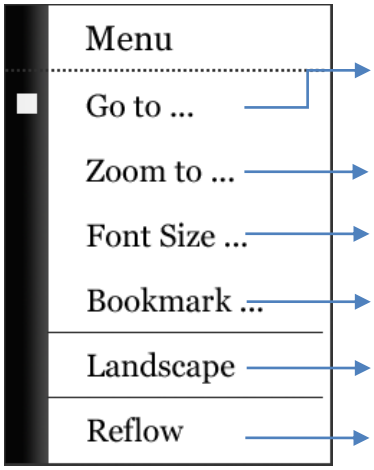


To go to a desired page

To resize a page to fit the screen and change the magnification level

To change size of the font displayed in Reflow mode

To open the bookmark of the book, if contained in the file

To change the page orientation

To view the file in Reflow mode

***Tip:*** *To show or hide the option menu, simply press the* ***Menu*** *button.*

**Opening and closing PDF's:**

1. In the main menu, press the **Navigation** button to select either "**Main Memory**" or "**SD Card**", and then press the **Center** of the **Navigation** button to activate your choice. The file list appears.

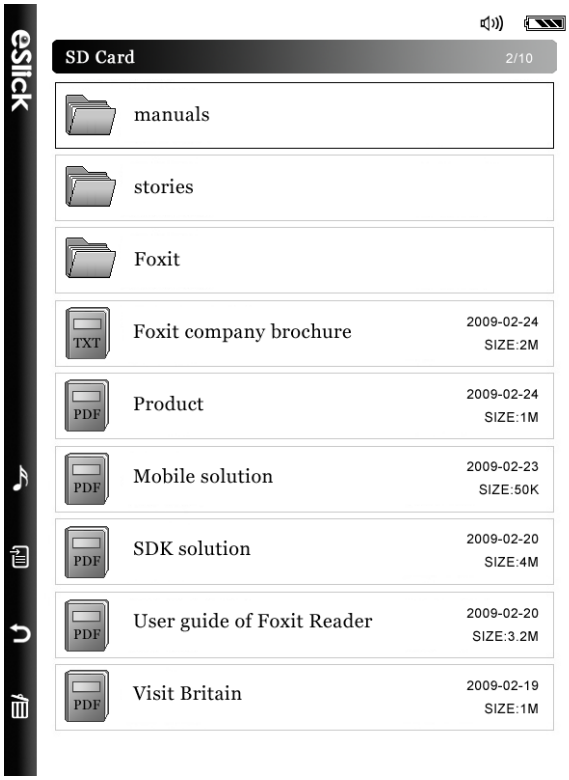


2. To open a book, press either **Up** or **Down** on the **Navigation** button to select the book you want to read, then press the **Center** of the **Navigation** button to activate your choice.

   To make pages easily viewable by laying them out according to the screen width, "**Fit Content Width**" is set as the default display mode when you open a new PDF file.

3. To close the book, please press the **Return** button ⮌ to close the book.

**Scrolling through documents:**

Foxit's eSlick allows you to scroll through the documents (see below):

**1.** Using the Navigation button.

After zooming in a PDF, you can use the **Navigation** button to move the document in four directions – up, down, left and right.

***Note:*** *Only when the pages are magnified to be larger than the size of "Fit Page", will this function be available.*

**2.** To Go to the next or previous page follow these steps:

- Resize a page to "Fit Page". To do this, please refer to "Adjusting the view of documents".
- To go to the previous or next page, press the **Navigation** button up or down (or left/right).

**3.** To Go to a specific page follow these steps:

- Press **Menu** > select the "**Go To**" option with the **Navigation** button and push either the **Up** or **Down** button > Press the **Center** of the **Navigation** button. The "**Go To Page"** box appears.

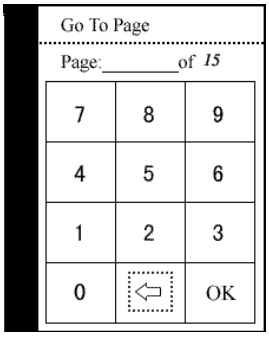


***Using shortcut keys***

*When reading a PDF file, please simply press the **Center** of the **Navigation** button. The shortcut menu appears. Press the **Up** button to perform the "Go to page" option.*

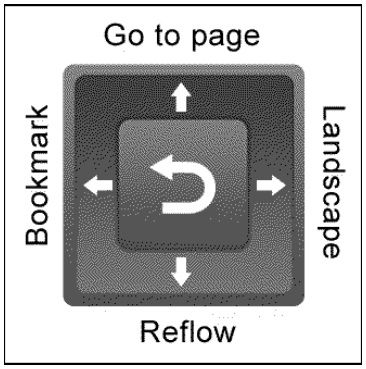


- In the "**Go To Page**" box, input your desired page number with the **Navigation** button, and then select "**OK**."

- (Optional) To delete the page number, you just input the page number, and then select the ⇦ icon button and then select "**OK**" to quit this box.

**Using bookmark menu:**

Bookmark, also known as outline, displays the list of bookmarks that the document contains. Generally speaking, it is a visual table of content that represents the chapters, main headings, and other organizational elements in a document. Using the bookmark structure allows you to move quickly to specific places within documents.

To navigate using the "**Bookmark menu**", follow these steps:

- Press **Menu** > select the "**Bookmark**" option with the **Navigation** button and push either the **Up** or **Down** button > Press the **Center** of the **Navigation** button. The "**Bookmark**" menu appears.

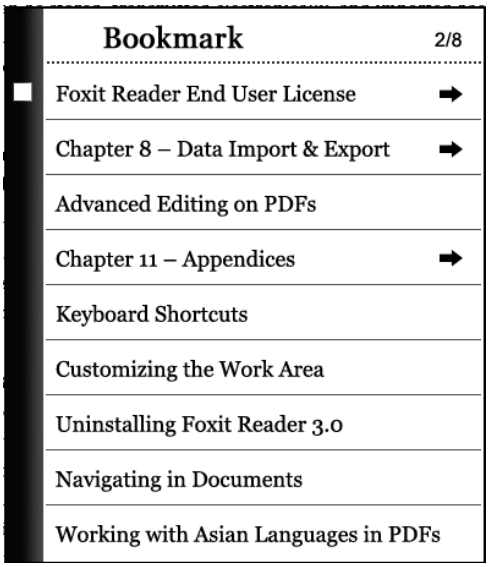


***Using shortcut keys***

*When reading a PDF file, press the **Center** of the **Navigation** button. The shortcut menu will appear. Press the **Left** button to perform the "Bookmark" option.*

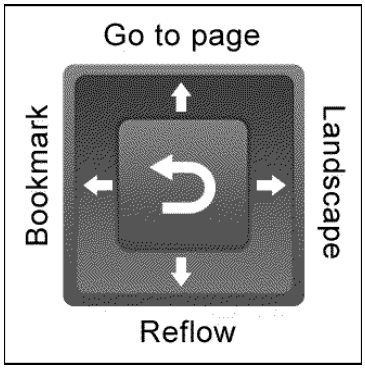


- Press the **Navigation** button either **Up** or **Down** to select a topic > press the **Center** of the **Navigation** button to jump to the topic.

***Tips:***

- *Press the **Navigation** button **Left** or **Right** to turn pages if there is more than one bookmark page.*
- *The topic with ➧ icon next to it indicates that this topic has subtopics. Press the **Center** of the **Navigation** button to show the subtopics.*

**Adjusting the view of documents:**

When reading a PDF, you can change the magnification level of the document with ease.

To change the magnification level of documents, follow these steps:

- Press **Menu** > select the "**Zoom To**" option with the **Navigation** button and push either the **Up** or **Down** button > Press the **Center** of the **Navigation** button. The "**Zoom To"** menu appears.

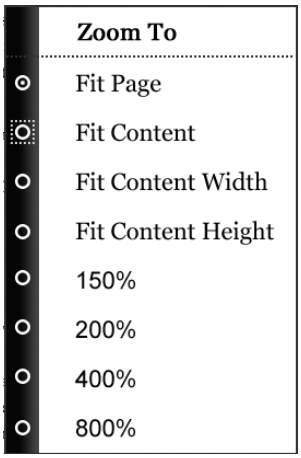

- Press the **Navigation** either **up** or **Down** to select a percentage of your choice and then press the **Center** of the **Navigation** button to activate your choice.

- (Optional) To change the magnification level of documents, you can also press the +/- Volume buttons to zoom in or out of a document. After zooming in a PDF, you can use the Navigation button to move the document in four directions – up, down, left and right.

**********Resizing to fit the screen**********

Foxit's eSlick allows 4 ways to Resize a page to fit the screen:

- Fit Page – To resize the page to fit entirely in the document pane. All books are resized by default to this mode when they are opened.
- Fit Content – To resize the page to fit its content.
- Fit Content Width – To resize the page to fit the content's width. In this mode part of the page may be out of view.
- Fit Content Height – To resize the page to fit the content's height. In this mode part of the page may be out of view.

**Viewing documents in landscape mode:**

Foxit eSlick fully supports landscape mode. To view in landscape mode, please do the following:

1. Press **Menu** > select the "**Landscape**" option with the **Navigation** button and push either the **Up** or **Down** button > Press the **Center** of the **Navigation** button to activate your choice.

**2.** (optional) To toggle between the "**Portrait"** and "**Landscape**" view, please follow the steps specified above.

***Using shortcut keys***

*When reading a PDF file, press the **Center** of the **Navigation** button. The shortcut menu appears. Press the **Right** button to perform the "Landscape" option.*

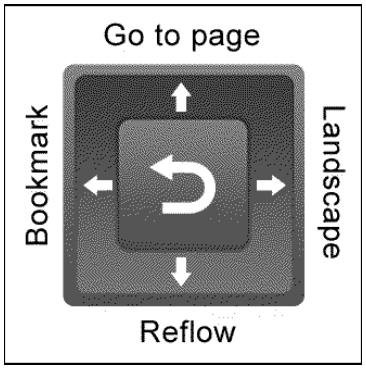


**Viewing documents in reflow mode:**

Reflow is a feature that automatically reorganizes text to fit the screen size when viewing a PDF file. It makes reading on mobile devices much easier, and you will not need to scroll from left or right to read anymore.

The Reflow feature also enables users to control the size of the text displayed on the page. In Reflow mode, the flow of text adjusts to fit in the available area of your eSlick device. You can also change the font size without losing the context of the page.

1. To reflow a PDF, press **Menu** > select "**Reflow**". A tick will display before this option, indicating you have entered into the reflow mode.

***Using shortcut keys***

*When reading a PDF file, press the **Center** of the **Navigation** button. The shortcut menu appears. Press the **Down** button to perform the "Reflow" option.*

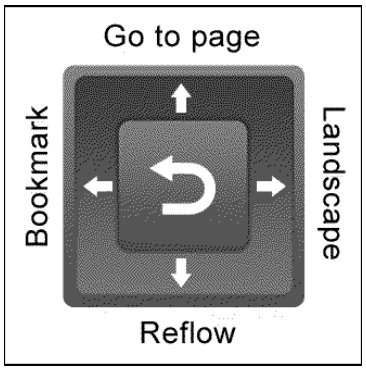


2. To change the font size, press **Menu** > select "**Font Size**" > select the size of the font you would like > press the **Center** of the **Navigation** button to activate your choice.

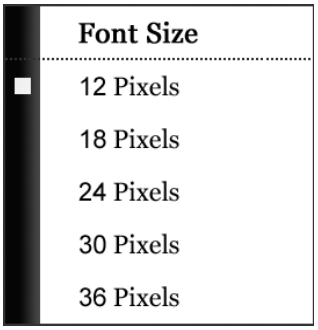


3. To exit the Reflow mode, press **Menu** > select "**Reflow**". The tick disappears.

***Note:** In Reflow mode, the "**Zoom To**" option will be grayed out and disabled.*

## Working with text files:

Reading text files with eSlick is much easier than reading PDF files. You can

navigate through the document, go to a specific page, zoom in or zoom out the text file, etc.

**Opening and closing text files:**

1. In the "**Main menu"**, press the **Navigation** button to select "**Main Memory**" or "**SD card**", and then press the **Center** of the **Navigation** button. The file list appears.

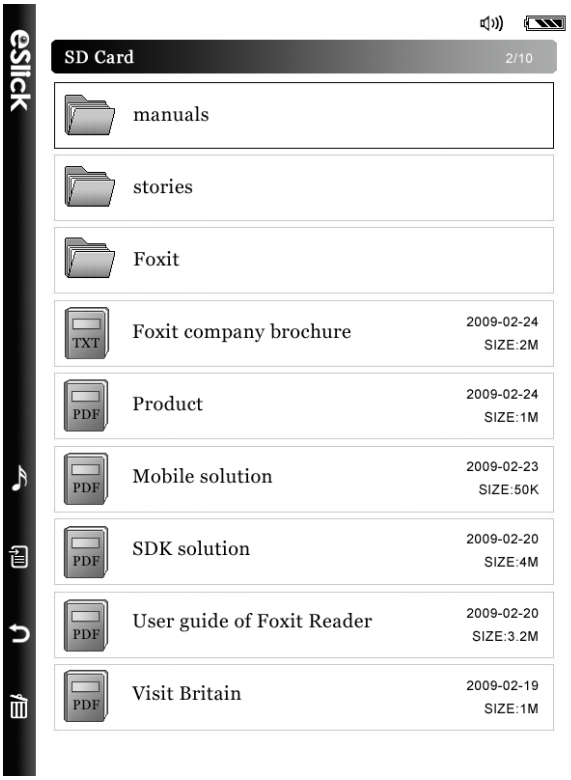


2. To open a book, press the **Navigation** button either **Up** or **Down** to select the book you want to read, and then press the **Center** of the **Navigation** button to activate your choice.

3. To close the book, press the **Return** button ⮌ to close the book.

**Scrolling through documents:**

1. To go to the previous or next page, press the **Navigation** button either **Left/Up** or **Right/Down**.

2. To zoom in or out the page, press the "**Increase sound volume**" button (+) or the **"Decrease sound volume button"** (-).

3. To Go to a specific page, follow these steps:

   - Press **Menu**, and the "**Go To Page"** box will appear.

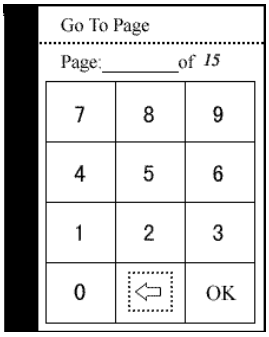


   - In the "**Go To Page**" box, input your desired page number with the **Navigation** button, and then select "**OK**."

   - (Optional) To delete the page number, you just input the page number, and then select the ⇦ icon button and then select "**OK**" to quit this box.

# Playing MP3

Have you ever thought about reading eBooks while listening to your favorite music? Are you tired of carrying around both your MP3 player and an eBook device? Foxit eSlick solves these problems. You can keep your favorite eBooks and your music in eSlick and enjoy reading and listening to music at the same time. When listening to MP3 music files, connect the earphones to the headset jack located at the bottom of the eSlick device.

## Playing MP3 files:

While listening to MP3 files, connect the provided earphones to the headset jack.

***Note:*** *The headset jack on the eSlick device prevents many standard 3.5 mm headphone jacks from fitting the device properly. With the provided earphones adapter, you can enjoy your music with your own earphones.*

1. In the main menu, press the "**Navigation"** button to select "**Music**", and then press the **Center** of the **Navigation** button. The "**Music menu"** appears.

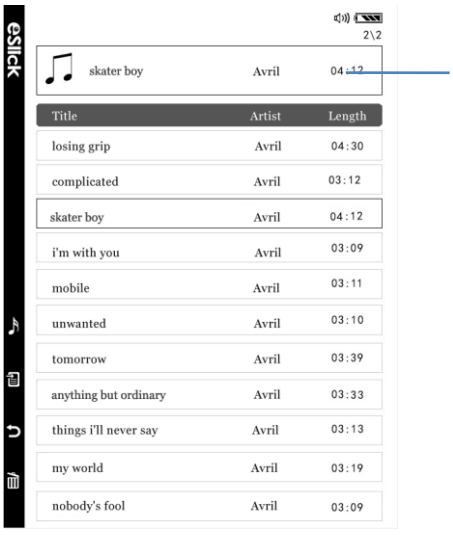


Displays the name of the current track

2. Press the **Navigation** button either **Up** or **Down** to select the song you prefer, and then press the **Center** of the **Navigation** button to select your choice. Press the **Navigation** button either **Left** or **Right** to go to the previous or next page of the audio list.

3. To skip to the previous or next track, press the **Navigation** button either **Up** or **Down**.

4. To adjust the volume, simply press the "**Increase sound volume"** button (+) or the **"Decrease sound volume button"** (-).

5. To stop playing music, press **Center** of the **Navigation** button again.

6. To set play mode on eSlick, please press **Menu**, and then refer to Setting eSlick's music mode.

***Tip:*** *To go into the audio list, you can also press the* ***Music*** *button. Please note that the* ***Music*** *button is disabled when reading files.*

## Reading books while playing MP3 files:

Foxit's eSlick allows you to read books while listening to MP3 files.

1. Select the desired track to play. For more details about how to play MP3 files, please go to "Playing MP3 files".

2. Press the **Return** button ⮌ to return to the "**Main menu"**, and then follow the steps specified in "Reading Content."

***Note:*** *The* ***Music*** ♪ *button is disabled when reading files. If you would like to listen to MP3 while reading, please press the* ***Return*** *button* ⮌ *and go to the "****Music****" menu to select the desired track first, and then start reading.*

# Settings

Customizing your eSlick device is a great way to make it match your reading style. On your eSlick, you can easily fix the settings on music mode, sleep mode, volume, etc. to your personal preferences.

## Setting the sleep mode:

You can set Foxit eSlick to automatically turn off. In the sleep mode, Foxit eSlick will go into a power saving mode and turn off automatically if no operations are performed for a certain period of time. The LED light at the top of eSlick will turn black when eSlick enters into sleep mode.

To set or adjust eSlick's sleep mode, follow these steps:

1. In the "**Main menu**", press **Menu**, there pops up the "**Setting Menu**". In the "**Setting Menu**", press the **Navigation** button to select "**Sleep Mode**", and then press the **Center** of the **Navigation** button. The "**Sleep Mode"** menu appears.

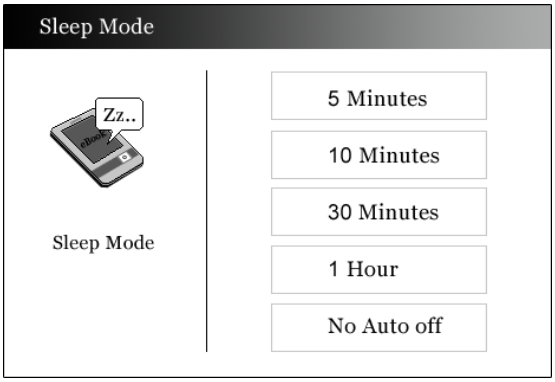


2. Select your "**Sleep Mode"** as to when the eSlick will turn off automatically after it goes into the sleep mode – 5 Minutes, 10 Minutes, 30 Minutes, or 1 Hour, and then press the **Center** of the **Navigation** button to save the changes.

3. Press **Menu** or the **Return** button to quit the "Sleep Mode" menu.

## Setting the eSlick volume:

1. In the "**Main menu**", press **Menu**, there pops up the "**Setting Menu**". In the "**Setting Menu**", press the **Navigation** button either "**Up** or **Down"** to select "**Volume**", and then press the **Center** of the **Navigation** button to activate your choice. The "**Volume Setting"** screen appears.

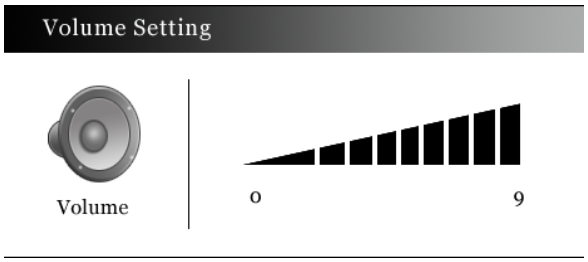


2. Press either **Left** or **Right** on the **Navigation** button to decrease or increase the volume. You can also press the "**Increase sound volume"** button (+) or the **"Decrease sound volume button"** (-) located on the side of eSlick to adjust the volume.

3. Press **Menu** or the **Return** button to quit the "**Volume Setting**" menu.

## Checking eSlick's system memory:

You can check the storage space of your eSlick device and the SD card. To check the available storage space, follow this step:

1. In the "**Main menu**", press **Menu**, there pops up the "**Setting Menu**". In the "**Setting Menu**", press the **Navigation** button either "**Up** or **Down**" to select "**Memory Status**", and then press the **Center** of the **Navigation** button to activate your choice.

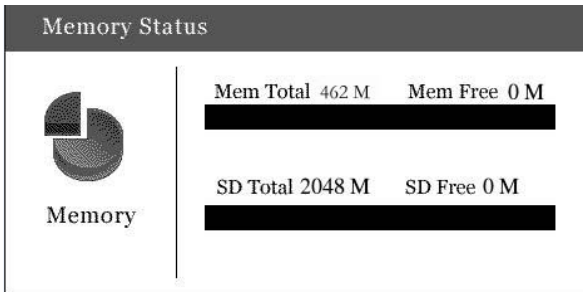


- "Mem", stands for Memory, refers to the storage space of the eSlick device.
- "SD", refers to the storage space of the SD card.

2. Press **Menu** or the **Return** button to quit the "**Memory Status**" menu.

## Setting eSlick's music mode:

The **"Music Mode"** settings determine what happens after a music track has finished playing. To change the "**Music Mode,"** follow these steps:

1. In the "**Main menu**", press **Menu**, there pops up the "**Setting Menu**". In the "**Settings Menu**", press the **Navigation** button either "**Up** or **Down"** to select "**Music Mode**", and then press the **Center** of the **Navigation** button to activate your choice. The "**Music Mode"** screen appears.

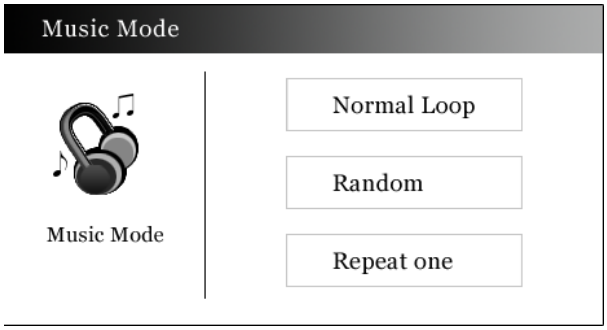


- **Normal Loop** – repeats the playlist
- **Random** – plays songs randomly
- **Repeat one** – repeats single track

2. Press **Menu** or the **Return** button to quit the "**Music Mode**" menu.

## Setting eSlick's preference:

The preference setting dialog box lets you configure eSlick so it works in a way that is comfortable for you. To change the "**Preference",** follow these steps:

**1.** In the "**Main menu**", press **Menu**, there pops up the "**Setting Menu**". In the "**Settings Menu**", press the **Navigation** button either "**Up** or **Down"** to select "**Preference**", and then press the **Center** of the **Navigation** button to activate your choice. The "**Preference"** screen appears.

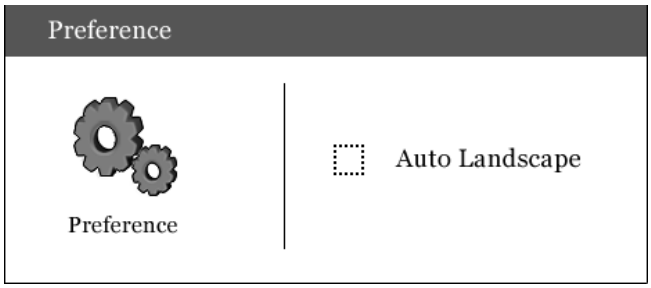


- **Auto Landscape** – Rotates to view content in Landscape mode automatically when the width of the file is larger than its height. When selecting this option, please note that the "Landscape" item will be grayed out and disabled when viewing PDF documents.

**2.** Press the **Navigation** button either "**Up** or **Down"** to select the item, and then press the **Center** of the **Navigation** button to activate your choice or deselect the option.

**3.** Press **Menu** or the **Return** button to quit the "**Preference**" menu.

## Viewing eSlick's information:

The "**About eSlick**" dialog box offers you the copyright information and software build number, which you may need when you contact Foxit Support. To view this information, follow these steps:

1. In the "**Main menu**", press **Menu**, there pops up the "**Setting Menu**". In the "**Settings Menu**", press the **Navigation** button either "**Up** or **Down"** to select "**About eSlick**", and then press the **Center** of the **Navigation** button to activate your choice. The "**About eSlick"** screen appears.

2. Press **Menu** or the **Return** button to quit the "**About eSlick**" menu.

# Other Information

## eSlick firmware update

To keep your eSlick up to date with new features and capabilities, Foxit recommends updating your eSlick device with free firmware updates for the eSlick device. The latest firmware updates can be performed from eSlick Firmware Updater, an application that checks for the latest firmware updates then downloads and installs the firmware to your eSlick device.

To learn more about eSlick firmware update, please visit:
http://www.foxitsoftware.com/ebook/update.html

For details on how to install the eSlick firmware update, please visit the following website:
http://www.foxitsoftware.com/ebook/instructions.html

## Getting license key for the included software

If you have placed an order for a Foxit eSlick, you will get the Foxit PDF Creator (worth $29.99) and the Foxit Reader Pro Pack (worth $39) for free. To obtain your license keys for these products, please go to http://www.foxitsoftware.com/ebook/getkey.html to enter the information and we will send you an e-mail with the license keys.

## FCC notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no

guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

## CE notice

This device is in conformity with the Directive 2004/108/EC (Electromagnetic Compatibility Directive). The Foxit ebook reader meets the following technical standards:

- EN 55013 – "Sound and television broadcast receivers and associated equipment - Radio disturbance characteristics - Limits and methods of measurement."
- EN 55020 – "Sound and television broadcast receivers and associated equipment. Immunity characteristics. Limits and methods of measurement."
- EN 61000-3-2 – "Electromagnetic compatibility (EMC). Limits. Limits for harmonic current emissions (equipment input current $3L 16 A per phase)."
- EN 61000-3-3 – "Electromagnetic compatibility (EMC). Limits. Limitation of voltage changes, voltage fluctuations and flicker in public low-voltage supply systems, for equipment with rated current $3L 16 A per phase and not subject to conditional connection."

## On Safety

- Do not use the adapter in a high moisture environment. Never touch the adapter when your hands or feet are wet.
- Be sure not to short-circuit the terminals of the eSlick with metallic objects.
- To avoid losing data due to electrostatic discharges or other types of events,

it is recommended that you regularly save and backup data.
- The built-in rechargeable battery of the eSlick is recyclable. Do not remove the battery yourself.

## On Cleaning

Here are some helpful tips for cleaning your eSlick device:

- Clean the case of the eSlick with a soft, lint-free cloth.
- If the case of the eSlick becomes very dirty, clean it with a soft cloth slightly moistened with water or a mild detergent solution.
- Be careful not to let water get into the eSlick device.

# Specification

**Screen**
6" E Ink® Vizplex screen 600 x 800 pixel resolution, 4-level gray scale

**Device Size**
7.4" x 4.7" x 0.4" (188×118×9.2mm)

**Weight**
6.4 ounces (180g) battery included

**eSlick Color**
Black , Gray(Black back), White (Light Gray back)

**Operating System**
Embedded Linux

**Internal Memory**
128MB/512MB

**Storage Memory**
SD Card (2GB included. Supports up to 4GB)

**Supported Formats**

- ***eBook Formats:*** PDF/TXT/MP3/STK/Any printable document (after file is converted to PDF using included software)
- ***Sound Formats:*** MP3

**Plugs**
Euro 2Pin, UK 3Pin, US 2Pin

**Battery**
Rechargeable Lithium-Battery

# Contact US

Feel free to contact us should you need any information or have any problems with our products. We are always here, ready to serve you better.

- ***Office Address:***
  Foxit Software Company
  39819 Paseo Padre Parkway
  Fremont CA 94538
  USA

- ***Mailing Address:***
  Foxit Software Company
  39819 Paseo Padre Parkway
  Fremont CA 94538
  USA

- ***Sales:***
  1-866-MYFOXIT or 1-866-693-6948 (8AM-5PM PST Monday - Friday)
  510-438-9090 (8AM-5PM PST Monday - Friday)
  408-307-9358 (8AM-5PM PST Monday - Friday)

- ***Support:***
  1-866-MYFOXIT or 1-866-693-6948 (8AM-5PM PST Monday - Friday)
  979-446-0280 (6AM-5PM PST Monday - Friday)

- ***Fax:***
  510-405-9288

- ***Website:***
  www.foxitsoftware.com/ebook

- ***E-mail:***
  Sales and Information - sales@foxitsoftware.com
  Technical Support - support@foxitsoftware.com
  Marketing Service - marketing@foxitsoftware.com